



Por manual de instrucciones e información de garantía en español visítenos en www.hmdxaudio.com

IMPORTANT SAFEGUARDS:

When using an electrical product, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

- Close supervision is necessary when this product is used by, on or near children, invalids or disabled persons.
- WARNING: Do not place speakers too close to ears. May cause damage to eardrums, especially in young children
- Use this product only for its intended use as described in this manual. Do not use attachments not recommended by HMDX.
- Do not place or store this product where it can fall or be dropped into a tub or sink.
- Do not place or drop into water or any other liquid.
- Not for use by children. THIS IS NOT A TOY.
- Turn off product when not in use.
- Never operate this product if it has a damaged cord, plug, cable or housing.
- · Keep away from heated surfaces.
- Only set on dry surfaces. Do not place on a surface wet from water or cleaning solvents.

SAVE THESE INSTRUCTIONS

Caution: Please read all instructions carefully before operating.

- Never leave the appliance unattended, especially if children are present.
- Never cover the appliance when it is in operation.
- This unit should not be used by children without adult supervision.
- Always keep the product away from high temperature and fire.

Battery Precautions

- Use only the size and type of batteries specified.
- When installing batteries, observe proper +/polarities. Incorrect installation of battery may cause damage to the unit.
- Do not mix different types of batteries together (e.g., alkaline with carbon-zinc or old batteries with new ones).
- If the unit is not going to be used for a long period of time, remove batteries to prevent damage due to possible battery leakage.
- Do not dispose of batteries in fire. Batteries may explode or leak.

CONGRATULATIONS ON YOUR PURCHASE

Thank you for purchasing the HMDX Geo Alarm Clock. We know life is complicated that's why we made the Geo so easy to use. It's one less thing you need to worry about! Aren't you glad we care?


Be sure to check out the entire HMDX product line on our website www.hmdxaudio.com-living life out loud!

Please take a few moments to read through this manual for a quick and easy explanation of the features and operation of your new Geo.

GETTING STARTED

Unpack the unit carefully. Remove all the accessories from the box. Do not remove any labels or stickers on the bottom of the unit or adapter. Before setting up the unit, verify that the following contents are present:

- Geo Alarm Clock x 1
- AC Adapter and power cord x 1

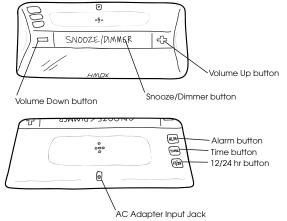

HMDX Service Center Email: cservice@hmdxaudio.com Phone: 1-800-753-3000 (8:30am-7pm EST M-F)



PRE-SET CLOCK

This unit is equipped with a pre-set clock, meaning the clock will automatically set itself when first plugged in. Please note: the clock will automatically default to Eastern Standard Time and will need to be adjusted for other time zones by manually setting the clock.

SETTING CLOCK TIME

- 1. Press (2 seconds) and release TIME SET button on back of unit, select the hour using the +/- buttons on the top to adjust the hour, press TIME SET button again to select the minute using the volume buttons on the top again to adjust the minutes. Press TIME SET button again and time is now set.
- 2. Select 12/24 hour display read out by pressing the 12/24 button on the back of the unit

NOTE: PM will be indicated when in 12 hour mode only.

SETTING THE ALARM

- 1. Press and hold the ALM button on back of unit for 3 seconds. The hour will begin flashing.
- 2. Use the +/- buttons on top of the unit to adjust the hour, paying attention to the AM and PM indicators (when in 12 hour mode).
- 3. Press and release the ALM button again and the minute will begin flashing. Use the +/- buttons on top of the unit to adjust the minutes.
- Press the ALM button again and the alarm is now set and will appear in the display.

SNOOZE OPERATION/TURNING OFF THE ALARM

Press the SNOOZE bar located on the top of the unit when the alarm is activated, the alarm will sound again in nine minutes.

To turn off the alarm, press the ALM button on the back of the unit, the will no longer appear.

Press the ALM button at any time to reactivate the alarm mode, the symbol will appear on display.

NOTE: The alarm time will default to last time set.

DISPLAY DIMMER CONTROL

Press the SNOOZE/DIMMER bar to adjust the intensity of the clock display.

BACKUP BATTERY

This alarm clock is equipped with a battery backup feature (1 CR-2032 battery included and already installed) to keep the clock time and alarm settings during power outage. The battery is located on the bottom of the unit for easy access.

MAINTENANCE

To Store:

You may leave the unit on display, or you can store it in a cool, dry place.

To Clean:

Only use a soft dry cloth to clean the enclosure of the unit. NEVER use liquids or abrasive cleaners to clean.

FCC DISCLAIMER:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- · Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

LIMITED 90 DAY WARRANTY

HMDX sells its products with the intent that they are free of defects in manufacture and workmanship for a period of 90 days from the date of original purchase, except as noted below. HMDX warrants that its products will be free of defects in material and workmanship under normal use and service. This warranty extends only to consumers and does not extend to Retailers. To obtain warranty service on your HMDX product, contact a Consumer Relations Representative by telephone at 1-800-753-3000 or

email cservice@hmdxaudio.com for assistance. Please make sure to have the model number of the product available. Representatives are available 8:30am-7:00pm EST Monday-Friday.

No COD's will be accepted.

HMDX does not authorize anyone, including, but not limited to, Retailers, the subsequent consumer purchaser of the product from a Retailer or remote purchasers, to obligate HMDX in any way beyond the terms set forth herein. This warranty does not cover damage caused by misuse or abuse; accident; the attachment of any unauthorized accessory; alteration to the product; improper installation; unauthorized repairs or modifications; improper use of electrical/power supply; loss of power; dropped product; malfunction or damage of an operating part from failure to provide manufacturer's recommended maintenance; transportation damage; theft; neglect; vandalism; or environmental conditions; loss of use during the period the product is at a repair facility or otherwise awaiting parts or repair; or any other conditions whatsoever that are beyond the control of HMDX.

This warranty is effective only if the product is purchased and operated in the country in which the product is purchased. A product that requires modifications or adoption to enable it to operate in any other country than the country for which it was designed, manufactured,

approved and/or authorized, or repair of products damaged by these modifications is not covered under this warranty.

THE WARRANTY PROVIDED HEREIN SHALL BE THE SOLE AND EXCLUSIVE WARRANTY. THERE SHALL BE NO OTHER WARRANTIES EXPRESS OR IMPLIED INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS OR ANY OTHER OBLIGATION ON THE PART OF THE COMPANY WITH RESPECT TO PRODUCTS COVERED BY THIS WARRANTY. HMDX SHALL HAVE NO LIABILITY FOR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES. IN NO EVENT SHALL THIS WARRANTY REQUIRE MORE THAN THE REPAIR OR REPLACEMENT OF ANY PART OR PARTS WHICH ARE FOUND TO BE DEFECTIVE WITHIN

THE EFFECTIVE PERIOD OF THE WARRANTY.

NO REFUNDS WILL BE GIVEN. IF REPLACEMENT PARTS FOR DEFECTIVE MATERIALS ARE NOT AVAILABLE. HMDX RESERVES THE RIGHT TO MAKE PRODUCT SUBSTITUTIONS IN LIEU OF REPAIR OR REPLACEMENT.

This warranty does not extend to the purchase of opened, used, repaired, repackaged and/or resealed products, including but not limited to sale of such products on Internet auction sites and/or sales of such products by surplus or bulk resellers. Any and all

warranties or guarantees shall immediately cease and terminate as to any products or parts thereof which are repaired, replaced, altered, or modified, without the prior express and written consent of HMDX. This warranty provides you with specific legal rights. You may have additional rights which may vary from state to state. Because of individual regulations, some of the above limitations and exclusions may not apply to you. For more information regarding our product line in the USA, please visit: www.hmdxaudio.com