

# HMDX

## ONE YEAR LIMITED WARRANTY

HMDX sells its products with the intent that they are free of defects in manufacture and workmanship for a period of 1 year from the date of original purchase, except as noted below. HMDX warrants that its products will be free of defects in material and workmanship under normal use and service. This warranty extends only to consumers and does not extend to Retailers.

To obtain warranty service on your HMDX product, contact a Consumer Relations Representative by telephone at 1-800-753-3000 or email [cservice@hmdxaudio.com](mailto:cservice@hmdxaudio.com) for assistance. Please make sure to have the model number of the product available. Representatives are available 8:30am-7:00pm EST Monday-Friday. No COD's will be accepted.

HMDX does not authorize anyone, including, but not limited to, Retailers, the subsequent consumer purchaser of the product from a Retailer or remote purchasers, to obligate HMDX in any way beyond the terms set forth herein. This warranty does not cover damage caused by misuse or abuse; accident; the attachment of any unauthorized accessory; alteration to the product; improper installation; unauthorized repairs or modifications; improper use of electrical/power supply; loss of power; dropped product; malfunction or damage of an operating part from failure to provide manufacturer's recommended maintenance; transportation damage; theft; neglect; vandalism; or environmental conditions; loss of use during the period the product is at a repair facility or otherwise awaiting parts or repair; or any other conditions whatsoever that are beyond the control of HMDX.

This warranty is effective only if the product is purchased and operated in the country in which the product is purchased. A product that requires modifications or adoption to enable it to operate in any other country than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications is not covered under this warranty.

THE WARRANTY PROVIDED HEREIN SHALL BE THE SOLE AND EXCLUSIVE WARRANTY. THERE SHALL BE NO OTHER WARRANTIES EXPRESS OR IMPLIED INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS OR ANY OTHER OBLIGATION ON THE PART OF THE COMPANY WITH RESPECT TO PRODUCTS COVERED BY THIS WARRANTY. HMDX SHALL HAVE NO LIABILITY FOR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES. IN NO EVENT SHALL THIS WARRANTY REQUIRE MORE THAN THE REPAIR OR REPLACEMENT OF ANY PART OR PARTS WHICH ARE FOUND TO BE DEFECTIVE WITHIN THE EFFECTIVE PERIOD OF THE WARRANTY.

NO REFUNDS WILL BE GIVEN. IF REPLACEMENT PARTS FOR DEFECTIVE MATERIALS ARE NOT AVAILABLE, HMDX RESERVES THE RIGHT TO MAKE PRODUCT SUBSTITUTIONS IN LIEU OF REPAIR OR REPLACEMENT.

This warranty does not extend to the purchase of opened, used, repaired, repackaged and/or resealed products, including but not limited to sale of such products on Internet auction sites and/or sales of such products by surplus or bulk resellers. Any and all warranties or guarantees shall immediately cease and terminate as to any products or parts thereof which are repaired, replaced, altered, or modified, without the prior express and written consent of HMDX.

This warranty provides you with specific legal rights. You may have additional rights which may vary from state to state. Because of individual regulations, some of the above limitations and exclusions may not apply to you. For more information regarding our product line in the USA, please visit: [www.hmdxaudio.com](http://www.hmdxaudio.com)

**HMDX is a trademark of HMDX.**

**©2013 HMDX. All Rights Reserved.**

**IB-HXB220**

Por manual de instrucciones e Información de garantía en español visítenos en [www.hmdxaudio.com](http://www.hmdxaudio.com)

# HMDX™

## SLEEP STATION™



PLEASE TAKE A MOMENT NOW TO  
REGISTER YOUR PRODUCT AT  
[www.HMDXaudio.com](http://www.HMDXaudio.com)

Your valuable input will help us create even  
better products in the future.

**Instruction Manual and  
Warranty Information**



## LISTENING TO THE RADIO

**NOTE:** For best reception, fully unwind the wire antenna. DO NOT strip, alter or attach to other antennas.

1. To listen to the radio, press the POWER button located on top of the unit.
2. Press the SOURCE button on the unit until FM icon and station frequency appears on the display.
3. Use the TUNER selector button on the top of the unit to select desired station. For auto seek press and hold TUNER selector for 2 seconds and the tuner will find the next station with the strongest frequency.
4. Press the POWER button to turn radio off.

## SLEEP FEATURE

While listening to the radio or AUX source, press the SNOOZE/DIM/SLEEP button to activate the sleep feature. This allows you to set a sleep timer for 60, 45, 30, and 15 minutes. Once set, the unit will continue playing for the set length of time, then will automatically turn off.

**NOTE:** The Sleep Station does not turn off the MP3/AUX device.

## PROJECTOR FUNCTION

The Sleep Station is equipped with a cool feature that allows you to project the TIME on any flat surface.

1. To turn projector on, press the PROJECTOR button on top of unit.
2. Carefully move the PROJECTOR device up or down to change where the image gets projected.
3. To adjust the focus, carefully turn the round end of the projector lens to the desired focus.
4. Press the PROJECTOR button to turn off.

## USB CHARGING PORT



- This USB port is for charging only. It cannot be used to play music through the unit.
- In order to use the USB charging feature, you must have the power cord to connect to your device with a USB Type A connector on the other end.

## CONNECTING TO 3.5MM AUDIO INPUT CABLE

1. Pull out the Audio Input Cable located on the front of the unit.
2. Plug the Audio Input Cable into the headphone input of an iPod/MP3 player or other audio device.
3. Push power button on the unit, then push the source button and select AUX mode (AUX icon will be displayed on LCD).
4. When the audio device is in play mode, the music will sound from the units speakers. Use volume controls on top of unit or your music device to adjust the volume.
5. When finished, press the power button to turn off the unit.

**NOTE:** You must turn OFF your audio device.

## HMDX SLEEP STATION™ ALARM CLOCK RADIO CONTROLS AND CONNECTIONS:

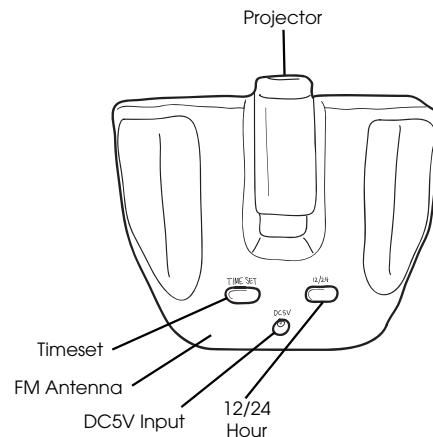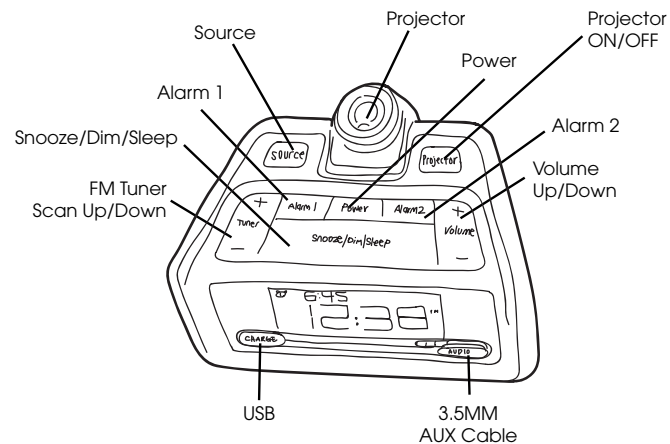

## VOLUME CONTROL

To adjust the volume, use the volume buttons located on the top of the unit

## BACKUP BATTERY

This alarm clock is equipped with a battery backup feature (1 CR-2032 battery included and already installed) to keep the clock time and alarm settings during power outage.

The battery is located on the bottom of the unit for easy access (small Phillips head screw driver required, not included).

## MAINTENANCE

**To Store:** You may leave the unit on display, or you can store it in a cool, dry place.

**To Clean:** Use only a soft dry cloth to clean the enclosure of the unit.

**NEVER** use liquids or abrasive cleaner to clean.



## FCC DISCLAIMER

**NOTE:** This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by HDMX could void the user's authority to operate the equipment.



## IMPORTANT SAFEGUARDS:

**When using an electrical product, basic precautions should always be followed, including the following:**

### READ ALL INSTRUCTIONS BEFORE USING

- Close supervision is necessary when this product is used by, on or near children, invalids or disabled persons.
- **WARNING:** Do not place speakers too close to ears. May cause damage to ear drums, especially in young children.
- Use this product only for its intended use as described in this manual. Do not use attachments not recommended by HMDX.
- Do not place or store this product where it can fall or be dropped into a tub or sink.
- Do not place or drop into water or any other liquid.
- Not for use by children. THIS IS NOT A TOY.
- Turn off product when not in use.
- Never operate this product if it has a damaged cord, plug, cable or housing.
- Keep away from heated surfaces.
- Only set on dry surfaces. Do not place on surface wet from water or cleaning solvents.

### SAVE THESE INSTRUCTIONS

**CAUTION:** Please read all instructions carefully before operating.

- Never leave the product unattended, especially if children are present.
- Never cover the product when it is in operation.
- This unit should not be used by children without adult supervision.
- Always keep the product away from high temperature and fire.

### Battery Precautions

- Use only the size and type of batteries specified.
- When installing batteries, observe proper +/- polarities. Incorrect installation of battery may cause damage to the unit.
- Do not mix different types of batteries together (e.g., alkaline with carbon-zinc or old batteries with new ones).
- If the unit is not going to be used for a long period of time, remove batteries to prevent damage due to possible battery leakage.
- Do not dispose of batteries in fire. Batteries may explode or leak.

