 




HMDX™



BURST™

RECHARGEABLE PORTABLE SPEAKER

CONGRATULATIONS ON YOUR PURCHASE

Thank you for purchasing the HMDX BURST Portable Speaker. Now that you own a Burst it's time to grab your friends and see where the party takes you.



Be sure to check out the entire HMDX product line on our website www.hmdxaudio.com – living life out loud!

OPERATING INSTRUCTIONS

- Pull out the Audio Input Connector (Fig.1)
- Plug the Audio Input Connector into the 3.5mm headphone output of a smartphone /tablet/laptop /MP3 player or other audio device.
- Push and hold the power button on the speaker for two seconds (Fig.2) until the blue LED Power Indicator illuminates.
- When the audio device is in play mode, the music will sound from the unit's speakers. Use the volume controls on your music device to adjust the volume.
- When finished, press the power button to turn the speaker off.



Audio Input Connector

(Fig.1)



Power button Charging Port

(Fig.2)

NOTE: When connecting the 3.5mm cord to a device you may hear interference until the cord is fully inserted to the headphone output of the device.



CHARGING THE BURST

Approximately 3 hours is required for a full charge. Speaker can be charged by using the USB to Micro USB cord (included), through a computer or AC adapter with USB jack (not included).

Note: Battery will last up to 12 hours.

TO CLEAN

Only use a soft dry cloth to clean the enclosure of the unit. NEVER use liquids or abrasive cleaner to clean.



One Year Limited Warranty:

For detailed Warranty Instructions and Information visit: <http://www.hmdxaudio.com/products/jam-wireless-portable-speaker.html>

To obtain warranty service on your HMDX product, contact a Consumer Relations Representative by telephone at 1-800-753-3000 or email cservice@hmdxaudio.com for assistance. Please make sure to have the model number of the product available. Representatives are available 8:30am - 7:00pm EST Monday-Friday.




IMPORTANT SAFEGUARDS:

When using an electrical product, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

- **WARNING:** Do not place speakers too close to ears. May cause damage to eardrums, especially in young children.
- Use this product only for its intended use as described in this manual. Do not use attachments not recommended by HMDX.
- HMDX is not liable for any damage caused to Smartphones, iPod/MP3 player or any other device.
- Do not place or store this product where it can fall or be dropped into a tub or sink.
- Do not place or drop into water or any other liquid.
- Not for use by children. THIS IS NOT A TOY.
- Never operate this product if it has a damaged cord, plug, cable or housing.
- Keep away from heated surfaces..
- Only set on dry surfaces. Do not place on a surface wet from water or cleaning solvents.

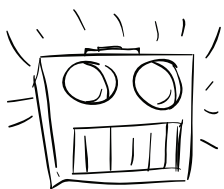

HMDX
Service Center



1-800-753-3000
8:30 am-7:00 pm (EST) M-F

Email:
cservice@hmdxaudio.com

HMDX is a trademark of HMDX.
©2013 HMDX. All Rights Reserved.

IB-HXP130