

PLEASE TAKE A MOMENT NOW
AND REGISTER YOUR PRODUCT AT:
www.hmdxaudio.com

Your valuable input will help us create
even better products in the future.



RECHARGEABLE WIRELESS SPEAKER
USER GUIDE AND WARRANTY INFORMATION

HX-P230

Por manual de instrucciones e
información de garantía en español
visitenos en www.hmdxaudio.com

Thank you for spreading
the Jam and purchasing the
HMDX JAM Classic
Wireless Speaker. Be sure
to check out the entire JAM
product line on our website:
www.hmdxaudio.com —
Where there's a Jam there's
a party!

Package Contents



User Manual



Speaker

 


Charging Cord

Charging the Unit


Approximately 3 hours required for
full charge. Can be charged by using
the USB to Micro USB cord
(included) through computer or AC
adapter with USB jack (not
included).

NOTE: Battery will last up to 4 hours
when connected wirelessly and up
to 12 hours when connected
through Aux-In Audio Jack.

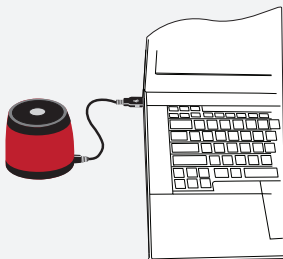


Controls

 1. Power Switch
2. Play/Pause Button
3. Volume Controls
4. Bluetooth Indicator
5. Line-In Audio Jack
6. Charging Port
7. Battery Status Indicator

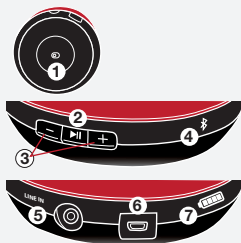

Indicators

	Indicator	Status
CHARGE	Flashing RED	Low Battery
	RED	Charging
	GREEN (when charging)	Fully Charged
Bluetooth	Quick Flash BLUE	Pairing Mode
	Slow Flash BLUE	Connected
	RED	Line-in Mode

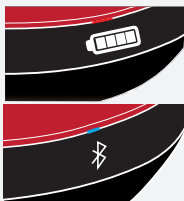 

Listening to your device wirelessly over Bluetooth®

To listen to your music over Bluetooth wireless connection, you need to
pair your device with JAM Classic:

1. Make sure your device has Bluetooth capability.
2. Slide POWER SWITCH to turn on the unit, indicator will begin to flash.
3. Follow the instructions of your device to pair the unit.
4. Pair your device with the unit by selecting JAM CLASSIC from your
Bluetooth listings on your device or selecting YES.
5. Press play on your device and use controls on the unit to adjust
desired volume.

NOTE:

- Once you have successfully paired your device, you typically will not
need to repeat the above steps. Please ensure the unit source is set to
Bluetooth and your device has Bluetooth enabled.
- When pairing with a computer please consult your computer
manufacturer for Bluetooth pairing instructions and/or
Bluetooth Drivers.
- A pairing code is not required.

Listening to your device through the Auxiliary Line-In Audio Jack

1. Connect Aux-in cable to the headphone or line-out jack of an audio device and plug the other end of the cable into the Line-In Audio Jack on the back of the unit.
2. Slide the POWER SWITCH to turn on the unit.
3. Press PLAY on the device and use controls on the unit to adjust desired volume.

NOTE: Play/pause controls on the unit will not work when using the line-in audio jack.

Maintenance

Only use a soft dry cloth to clean the enclosure of the unit. NEVER use liquids or abrasive cleaner to clean.

FCC Disclaimer:

NOTE: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules and Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment. Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

One Year Limited Warranty:

For detailed Warranty Instructions and Information visit:

<http://www.hmdxaudio.com/products/jam-wireless-portable-speaker.html>

To obtain warranty service on your HMDX product, contact a

Consumer Relations Representative by telephone at 1-800-753-3000

or email cservice@hmdxaudio.com for assistance. Please make sure

to have the model number of the product available. Representatives

are available 8:30am - 7:00pm EST Monday-Friday.

IMPORTANT SAFEGUARDS:

When using an electrical product, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

- **WARNING:** Do not place speakers too close to ears. May cause damage to ear drums, especially in young children.
- Use this product only for its intended use as described in this manual. Do not use attachments not recommended by HMDX.
- HMDX is not liable for any damage caused to Smartphones, iPod/MP3 player or any other device.
- Do not place or store this product where it can fall or be dropped into a tub or sink.
- Do not place or drop into water or any other liquid.
- Not for use by children. THIS IS NOT A TOY.
- Never operate this product if it has a damaged cord, plug, cable or housing.
- Keep away from heated surfaces.
- Only set on dry surfaces. Do not place on surface wet from water or cleaning solvents.

WARNING:

This product has an internal, non-replaceable lithium battery. Please dispose in accordance with your local state, province and country guidelines.

Por manual de instrucciones e información de garantía en español visítenos en www.hmdxaudio.com

HMDX Jam and HMDX are trademarks of HMDX.

©2012-2013 HMDX. All Rights Reserved.

IB-HXP230C