

One Year Limited Warranty

For detailed Warranty Instructions and Information visit: <http://www.hmdxaudio.com/products/jam-wireless-portable-speaker.html>. To obtain warranty service on your HMDX product, contact a Consumer Relations Representative by telephone at 1-800-753-3000 or email cservice@hmdxaudio.com for assistance. Please make sure to have the model number of the product available. Representatives are available 8:30am - 7:00pm EST Monday-Friday.



Por manual de instrucciones e Información de garantía en español visítenos en www.hmdxaudio.com

HMDX Jam and HMDX are trademarks of HMDX.

©2013 HMDX. All Rights Reserved.

IB-HXP730



Instruction Manual and Warranty information

1 year
limited warranty

Por manual de instrucciones e Información de garantía en español visítenos en www.hmdxaudio.com

HX-P730

Thank you for Spreading the Jam and purchasing the JAM Party, Rechargeable Stereo Boombox. Now that you own a Party it's time to start your own party.

Be sure to check out the entire JAM product line on our website www.hmdxaudio.com - Where there's a Jam there's a party!

IMPORTANT SAFEGUARDS:

When using an electrical product, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

 
- **WARNING:** Do not place speakers too close to ears. May cause damage to ear drums, especially in young children.
- Use this product only for its intended use as described in this manual. Do not use attachments not recommended by HMDX.
- HMDX is not liable for any damage caused to Smartphones, iPod/MP3 player or any other device.
- Do not place or store this product where it can fall or be dropped into a tub or sink.

- Do not place or drop into water or any other liquid.
- Not for use by children. **THIS IS NOT A TOY.**
- Never operate this product if it has a damaged cord, plug, cable or housing.
- Keep away from heated surfaces.
- Only set on dry surfaces. Do not place on surface wet from water or cleaning solvents.

Package Contents



User Manual



Jam Party



AC Adaptor

Charging the Unit

Approximately 3 hours required for full charge. Can be charged by using the Included AC Adapter.


Note: Battery will last up to 8 hours when connected wirelessly and up to 12 hours when connected through Aux-In Audio Jack.

Indicators

	Indicator	Status
Battery Indicator	Blinking Green	Charging
	Solid Green	Fully Charged
Bluetooth Indicator	Quick Flash BLUE	Pairing Mode
	Slow Flash BLUE	Connected
	RED	Line-in Mode

Controls

 1. Bluetooth® Indicator
2. Power Button
3. REV Track
4. Play/Pause Button
5. FWD Track
6. Volume Down
7. Volume Up
8. Battery Status Indicator
9. Charging Port
10. Line-In Audio Jack

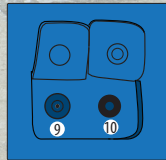

Listening to your device wirelessly over Bluetooth®

To listen to your music over Bluetooth® wireless connection, you need to pair your device with Jam Party:

1. Make sure your device has Bluetooth® capability, and it is enabled.
2. Press the power button; and the blue indicator will begin to flash.
3. The Unit will be listed as “Jam Party” on your Device.
4. Follow the pairing instructions of your device to pair with the Jam Party.
5. Press play on your device and use controls on the device and Jam Party to adjust desired volume.

NOTE:

 
- A pairing code is not required.
- Once you have successfully paired your device, you may not need to repeat the above steps.
- When pairing a device, please ensure the AUX cable is unplugged and your device has been Bluetooth® enabled.
- When pairing with a computer, please consult your computer manufacturer for Bluetooth® pairing instructions and/or the latest Bluetooth® Drivers.
- When turning the Jam Party “on” for the 1st time you will hear a loud tone at startup. After the 1st time you turn the Speaker on, the speaker will turn back on at the previously set volume.

Listening to a non-Bluetooth® audio device


1. Plug a 3.5mm audio cable (not included), into the AUX audio line input located on the back of the unit.
2. Plug the other end of the audio cable into the line out or headphone jack of your audio device.
3. Press the POWER button located on top of the JAM Party.
4. Press play on the connected device.

NOTE: You may need to adjust the volume on your audio device to achieve proper volume.

NOTE: Track forward/reverse and play/pause controls on JAM Party will not work when using line-in audio jack.

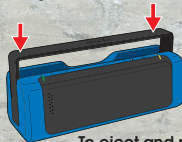

 To eject and retract the handle press on both sides of the handle as shown.

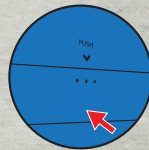

To release the Kickstand press on the dots on bottom of unit.

Maintenance

Use only a soft dry cloth to clean the enclosure of the unit.
NEVER use liquids or abrasive cleaner to clean.

FCC Warning

Note: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or

television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules and Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment. Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.